



Cotton Candy Instructions

1. Plug in machine.
2. Add in sugar. Fill the red compartment almost completely, leaving about an inch at the top.
3. Set heat. (Place it at about 2 o'clock).
4. Place the bin and plastic bubble cover on the machine.
5. Turn the machine on. (Both switches should be down and green light will be on).
6. Cotton candy will be produced within 2 minutes, adjust heat to produce the desired speed of cotton candy. When the amount produced by the machine begins to slow, turn the machine off and add more sugar.
7. When finished with the machine, turn the switch off. Leave the machine as is and return it. (**We will clean it.**)

Please call (413) 589-7368 with any questions or **immediately** if there are any problems with the machine.

****Do not allow any water near the machine.****

*****PLEASE DO NOT THROW AWAY CLIPS!*****