



Coffeemaker Instructions

Important Safeguards

1. USE ONLY 110-120 VOLT GROUNDED OUTLET!
2. Never plug coffeemaker in without water or liquid coffee in it. This will ruin the machine!
3. Do not touch hot surfaces. Use Handles or Knobs
4. Never immerse cords or plugs of coffee maker in water or other liquid.
5. Unplug from the outlet when not in use. Allow to cool before putting on or taking off parts.
6. Do not let cord hang over edge of table or counter top, or touch hot surfaces.
7. Do not place on or near a hot burner, or in a heated oven.
8. Make sure cover, coffee basket, percolating tube and cord are properly attached before coffeemaker is plugged in.

Instructions

*****Always plug cord into outlet before turning any control on. To disconnect, turn any control "OFF", then remove plug from outlet!*****

Measure Water – remove cover and basket assembly. Fill coffeemaker with fresh, COLD water to desired fill line. Do not fill past top fill line. Never use hot water to make coffee.

Measure Coffee – Measure appropriate amount of coffee (see chart) into coffee basket and set basket on percolating tube. Place percolating tube into heating well. DO NOT FORCE IT INTO PLACE. Place cover on coffeemaker and turn to secure.

Coffee Measuring Guide

<u>Cups</u> (5oz. serving)	<u>Ground Coffee</u> (8oz. dry measure)
12-15	$\frac{3}{4}$ cup
20-25	1 $\frac{1}{2}$ cups
30-36	2 cups
40-45	2 $\frac{1}{2}$ cups
50-55	3 $\frac{1}{4}$ cups
60-65	3 $\frac{3}{4}$ cups
80-85	5 $\frac{1}{2}$ cups
95-100	6 $\frac{1}{4}$ cups

1 lb of coffee = 5 cups

Allow approximately 1 minute per cup brewing time

* Never make less than minimum or more than maximum capacity of coffeemaker*

Twist-To-Secure Cover – before brewing, place cover on coffeemaker and turn to secure in handle slots. Note arrows on cover for correct turning. To remove cover, reverse procedure.



Begin Brewing – Plug in, and turn to “ON” position. Coffeemaker will begin brewing once turned on, and will stop automatically. Signal light will glow when ready to serve. After brewing, coffeemaker will switch to low heat to keep coffee at proper serving temperature.

Serve – *Before Serving: using a hot pad, remove coffee basket and percolating tube. If not removed, bitter oils from grounds will drip into coffee.* Push or pull faucet and hold until cup is full, release and it shuts off automatically. *For continuous pour (for large carafe or server) rotate knob one-half turn and pull forward to “lock” into place. Lift knob to stop, and rotate back to regular serving position.*

****When done with the machine, please empty and leave as is. We will clean it for you ****